 


Fig. 1

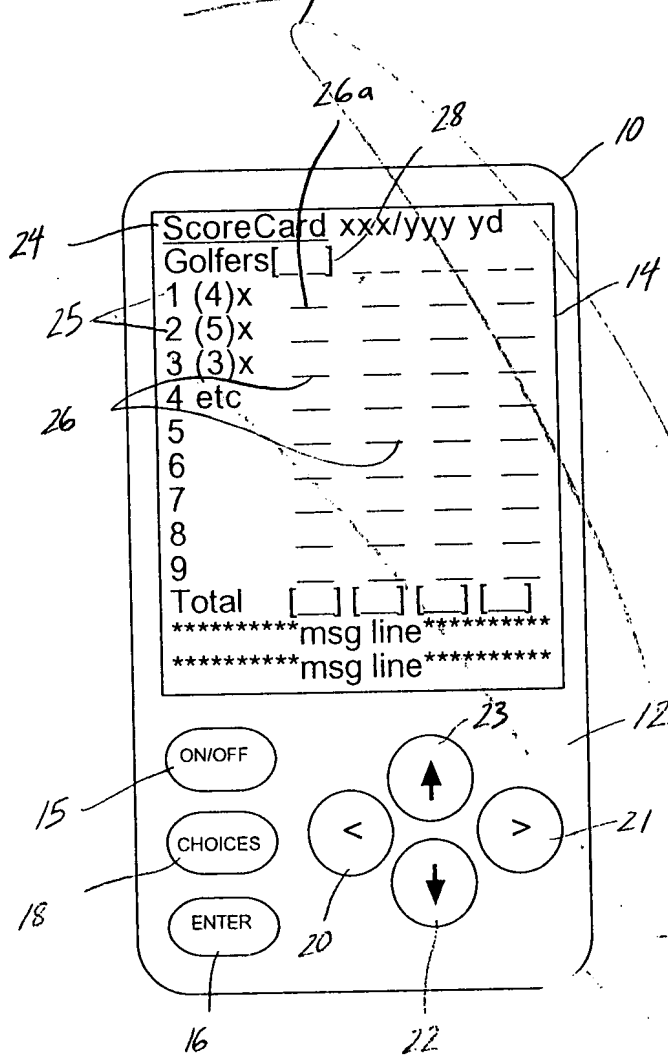


GOLF SOFTWARE FLOWCHART

9/93

392 280

 
Fig. 2

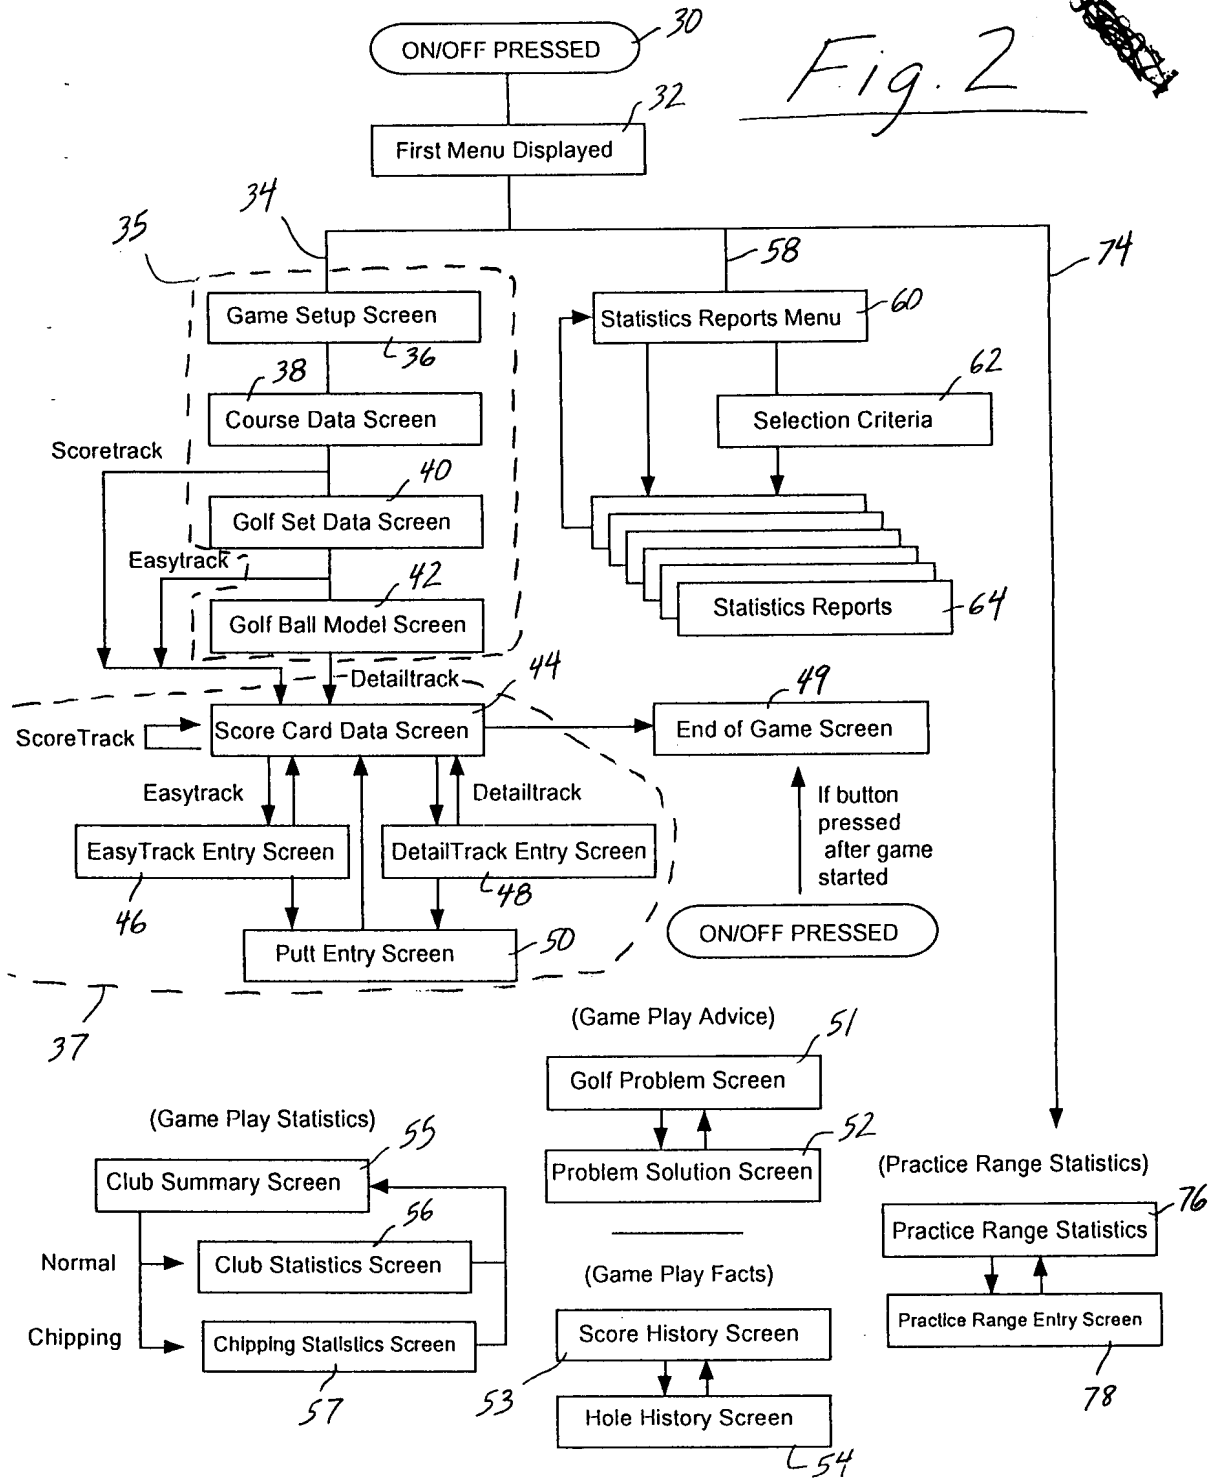

392 280

Fig. 3

 GAME SETUP SCREEN

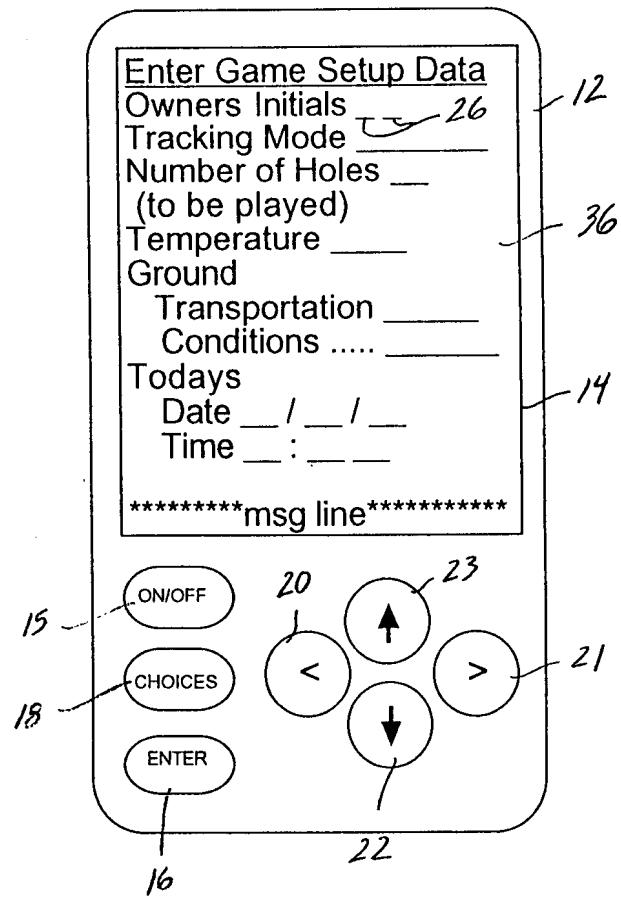

4/19/93

392280
00 950074

Fig. 4

COURSE DATA ENTRY SCREEN

The diagram shows a handheld device with a rectangular display screen and a keypad below it. The screen displays the following text:

Enter Course Data
Course Number < >
Course Name
Enter: Par / Yards

1	- / -	10	- / -
2	- / -	11	- / -
3	- / -	12	- / -
4	- / -	13	- / -
5	- / -	14	- / -
6	- / -	15	- / -
7	- / -	16	- / -
8	- / -	17	- / -
9	- / -	18	- / -

*****msg line*****

The keypad consists of several buttons:

- ON/OFF (labeled 15)
- CHOICES (labeled 18)
- ENTER (labeled 16)
- A central cluster of four directional buttons: Up (labeled 20), Down (labeled 22), Left (labeled 23), and Right (labeled 21).

Handwritten labels with leader lines point to various parts of the device: 12 points to the top of the screen, 26 points to the 'Course Name' field, 38 points to the right side of the screen, 23 points to the Up arrow button, and 22 points to the Down arrow button.

392280

Fig. 5

GOLF SET ENTRY SCREEN

The diagram shows a handheld device with a screen and a keypad. The screen displays the following text:

Enter Golf Set Data

Golf Set Number <_>

Golf Set Name _ _

Irons 1_ 2_ 3_ 4_ 5_ 6_

7_ 8_ 9_ pw_ sw_

Putter _

Woods 1_ 2_ 3_ 4_ 5_

6_ 7_

Other Clubs _ _ , _ _ , _ _

***** msg line *****


The keypad includes the following buttons:

- ON/OFF (15)
- CHOICES (18)
- ENTER (16)
- Left arrow (20)
- Up arrow (23)
- Right arrow (21)
- Down arrow (22)

08 2532 280

Fig. 6

 GOLF BALL ENTRY SCREEN

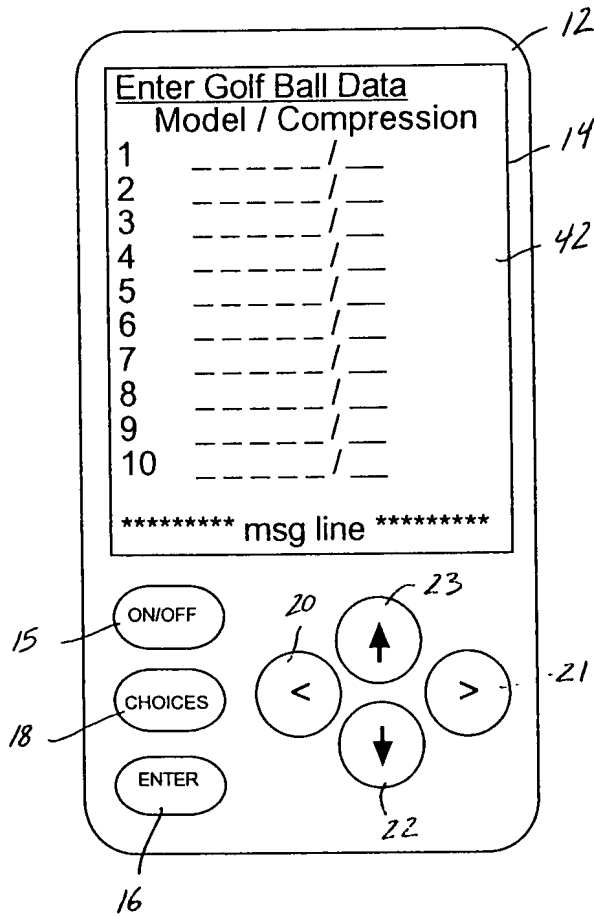

SCORECARD SCREEN
FRONT NINE

Fig. 7

392280
4/19/93

ScoreCard xxx/yyy yd

Golfers[]

1 (4)x				
2 (5)x				
3 (3)x				
4 etc				
5	26			
6				
7				
8				
9				
Total				
*****msg line*****				

Controls: 15 (ON/OFF), 18 (CHOICES), 16 (ENTER), 20 (<), 23 (↑), 21 (>), 22 (↓)

Fig. 7a

SCORECARD SCREEN
BACK NINE

ScoreCard xxx/yyy yd

Golfers[]

10 (4)				
11 (3)				
12 (5)				
13 (4)				
14 etc				
15				
16				
17				
18				
Total				
*****msg line*****				

Controls: 15 (ON/OFF), 18 (CHOICES), 16 (ENTER), 20 (<), 23 (↑), 21 (>), 22 (↓)

Fig. 8

EASYTRACK ENTRY SCREEN

12

46

14

26

Enter Shots [hole][yards]			
Shot	Club	Yards	Dir
1	—	—	—
2	—	—	—
3	—	—	—
4	—	—	—
5	—	—	—
6	—	—	—
7	—	—	—
8	—	—	—
9	—	—	—
10	—	—	—
11	—	—	—
*****msg line*****			

15

18

16

20

23

21

22

ON/OFF

CHOICES

ENTER

<

>

↑

↓

Fig. 9

DETAILTRACK ENTRY SCREEN

12

Enter Shots[hole] [yards]

Last	Current
[] Shot	< > 28
[] Club	—
[] Yardage	—
[] Direction	—
[] Power	— 14
[] Ball Model..	—
[] Shot Surface	—
[] Land Surface	— 48

***** msg line *****

15 ON/OFF 20 23 21

18 CHOICES < >

ENTER 22

16

392280

Fig. 10

SCORECARD CHOICE SCREEN
FRONT NINE


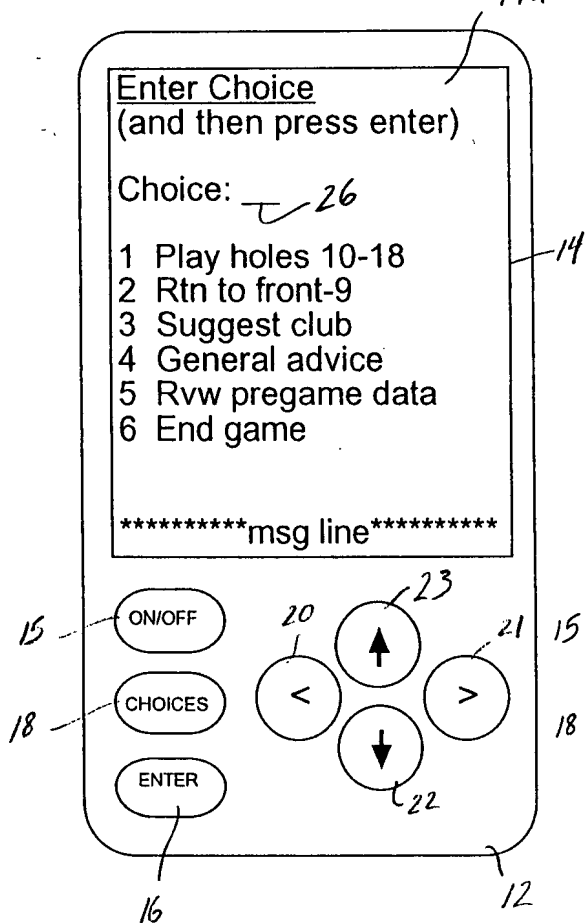 


Fig. 10a

 SCORECARD CHOICE SCREEN
BACK NINE

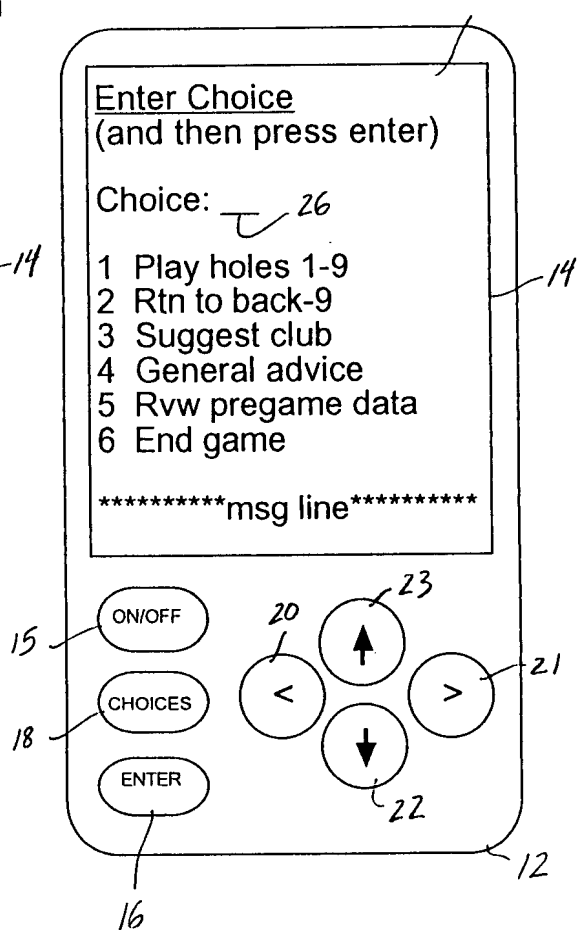

392280

Fig. 11

PUTT ENTRY SCREEN

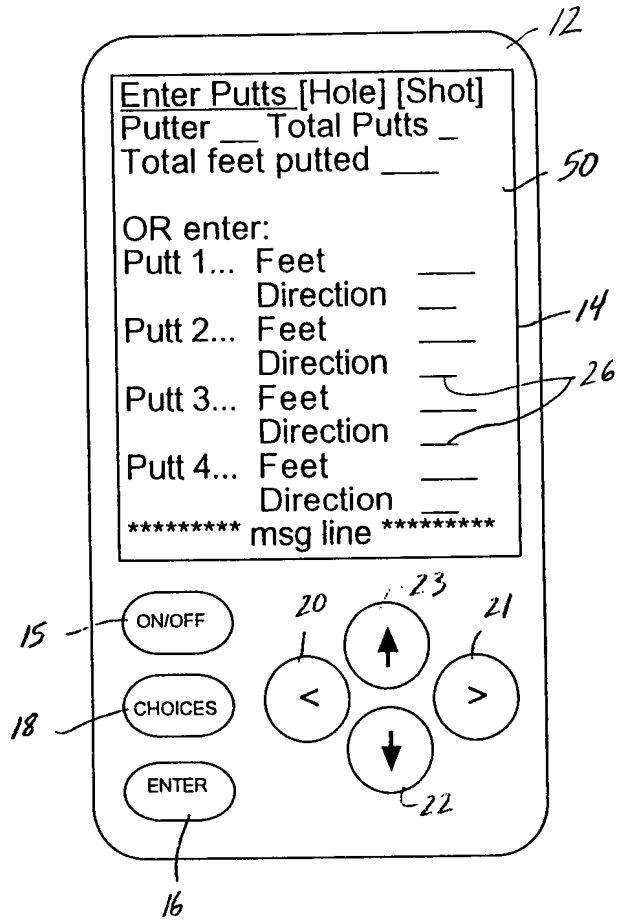 


Fig. 12

STATISTICS REPORT MENU


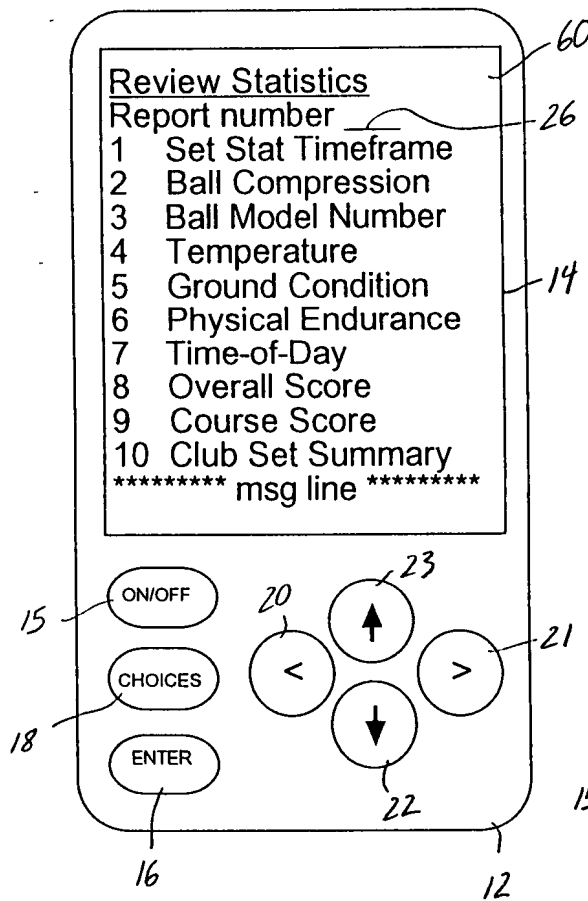 


Fig. 12a

 STATISTICS REPORT MENU

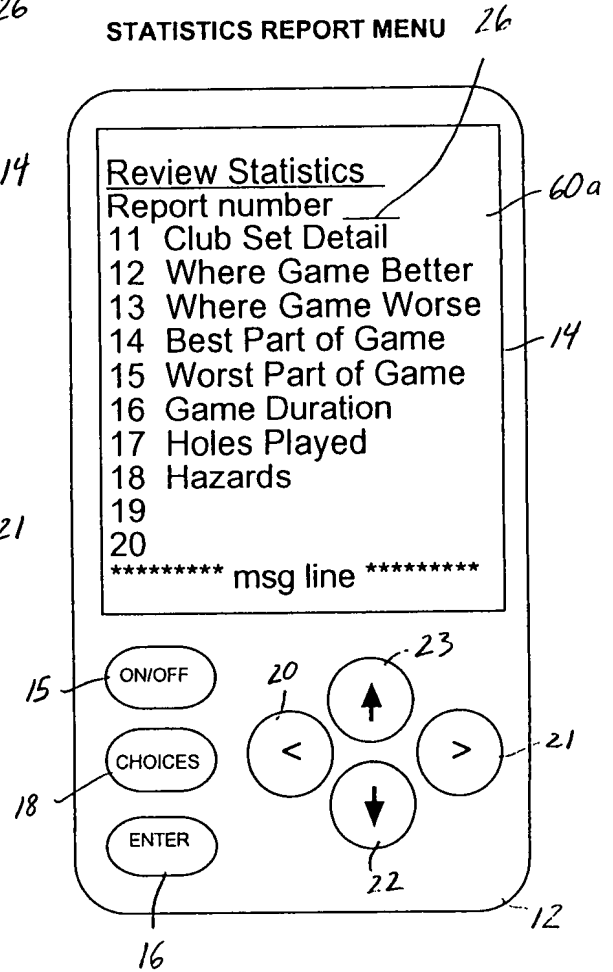

4/19/93

392280

Fig. 13

SET REPORT TIMEFRAME SCREEN

Set Stat Timeframe
Display statistics on
games played:

Range _____
[mm/dd/yy to mm/dd/yy]

OR specify dates:



From _/_/_
Through _/_/_

*****msg line*****

15 ON/OFF
18 CHOICES
ENTER
16
20 <
23 ↑
22 ↓
21 >
12

Fig. 14
GOLF PROBLEM SCREEN

  4/19/93 392,280

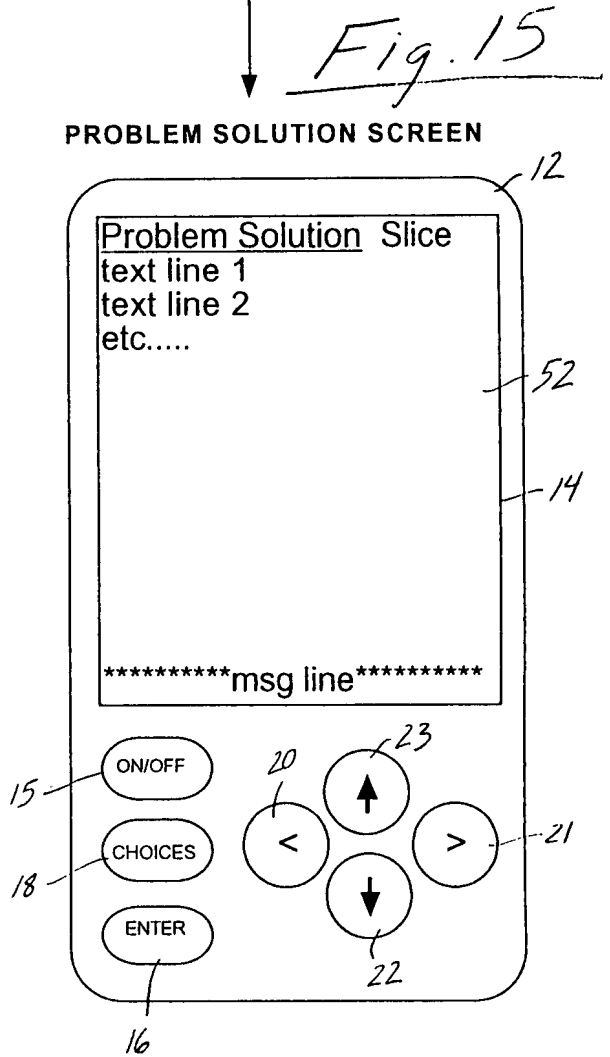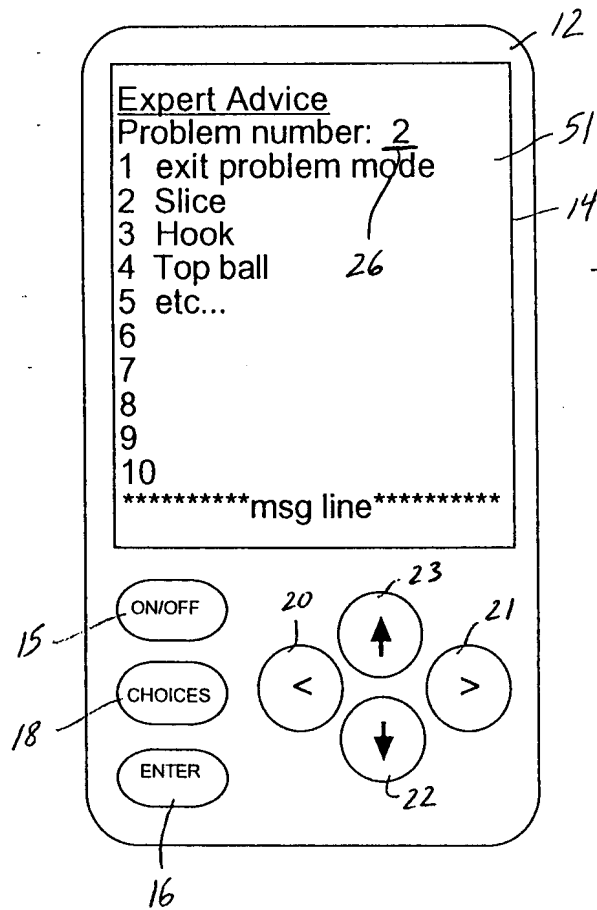

SCORE HISTORY SCREEN

Fig. 16

08 392280


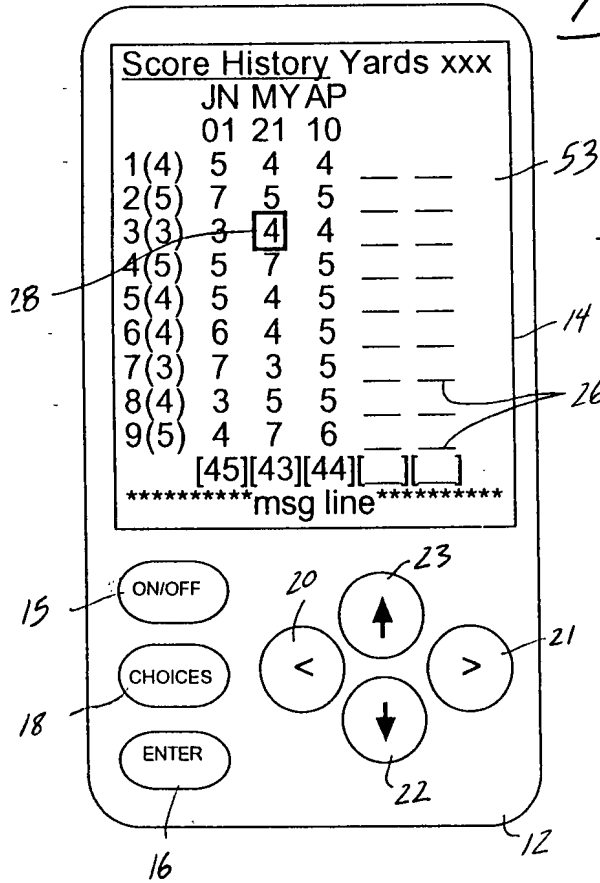 


Fig. 17

 HOLE HISTORY SCREEN

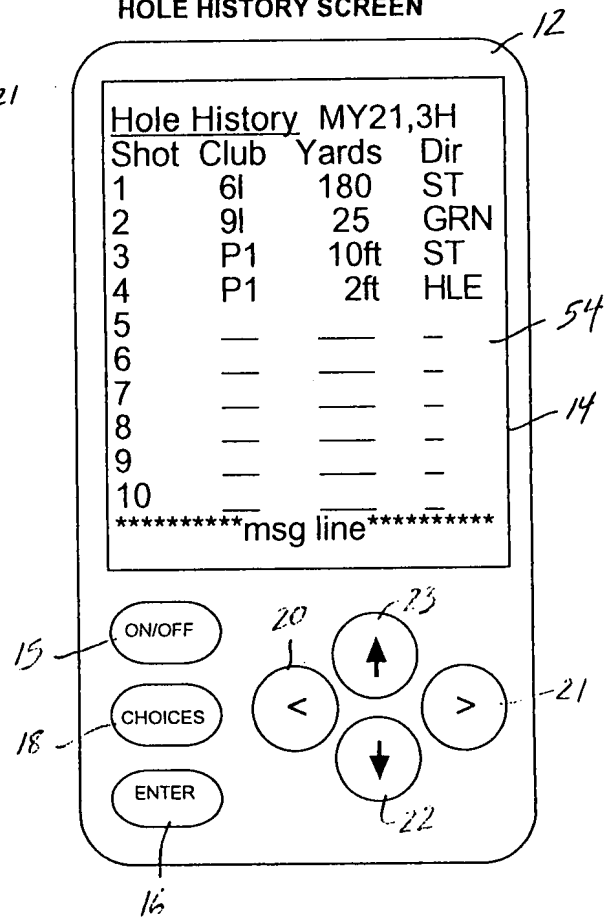

CLUB SUMMARY SCREEN

Enter Club Club 26

Club	Yards	Accuracy
1W	275	90%
2W	260	95%
1I	245	50%
2I	230	65%
3W	225	90%
4W	210	70%
3I	200	70%
4I	195	75%
5I	185	90%
5W	180	50%

***** msg line *****

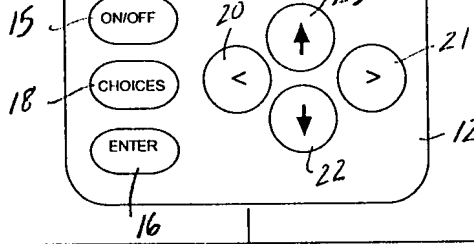 


Fig. 19

Fig. 20


FAIRWAY STATISTICS

APPROACH/CHIPPING STATISTICS

Club Display Club 3W

Avg Yards	
Dry	240
Normal	225
Wet	200
Fairway	90%
Hook	10%
Slice	0%
Green	0%

***** msg line *****

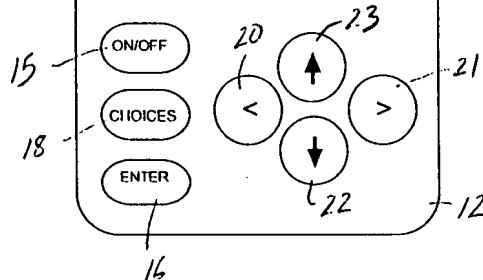 


Club Display Club 8I

Yard to Green			
150+	125	100	
Short	20%	20%	30%
Over	10%	0%	0%
Left	60%	55%	20%
Right	0%	0%	0%
Green	10%	25%	50%

In landing on green,
average feet to hole is:
25 feet

***** msg line *****

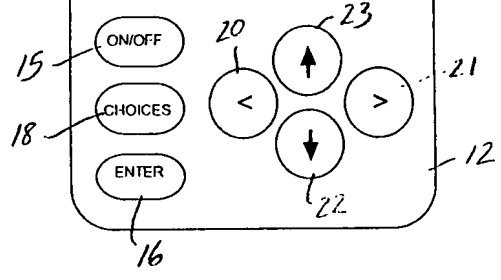 

PRACTICE RANGE STATISTICS

392280

Fig. 21


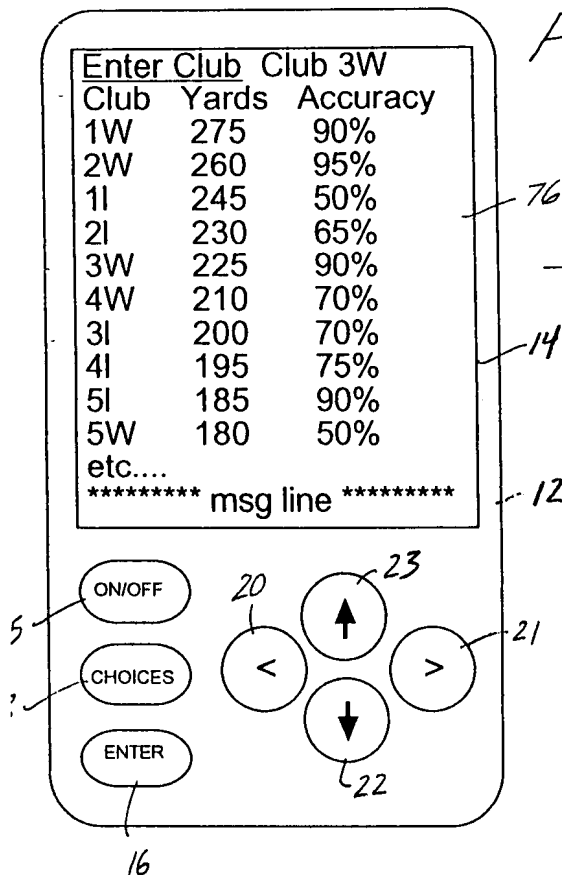 


Fig. 22

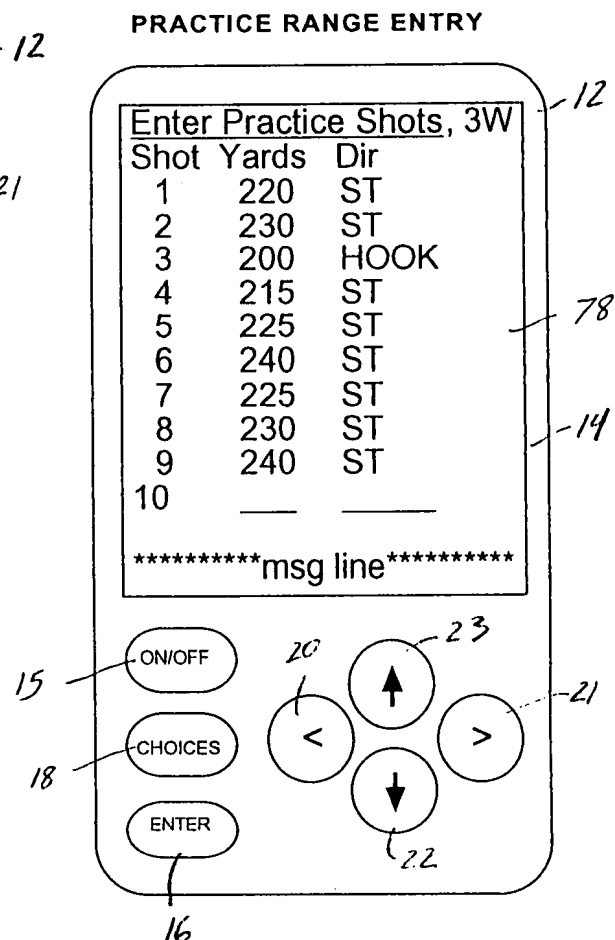 

4/19/93

392280

Fig. 23

END OF GAME SCREEN

12

Enter End of Game Data

[Date]

Were all ☐ Holes Completed? 26

If no, do you wish to return back to the main menu? 14

Answer 49

If no, enter reason for not completing all holes.

Answer

***** msg line *****

15 ON/OFF

18 CHOICES

ENTER

16

20

23


21

22

392280

Fig. 24

 
BALL COMPRESSION REPORT

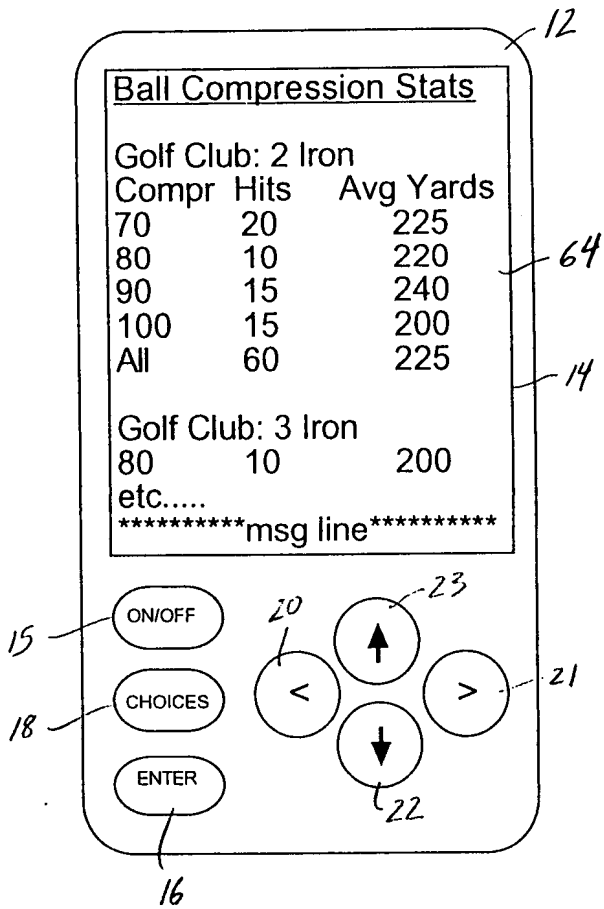

392280

Fig. 25

 BALL MODEL REPORT

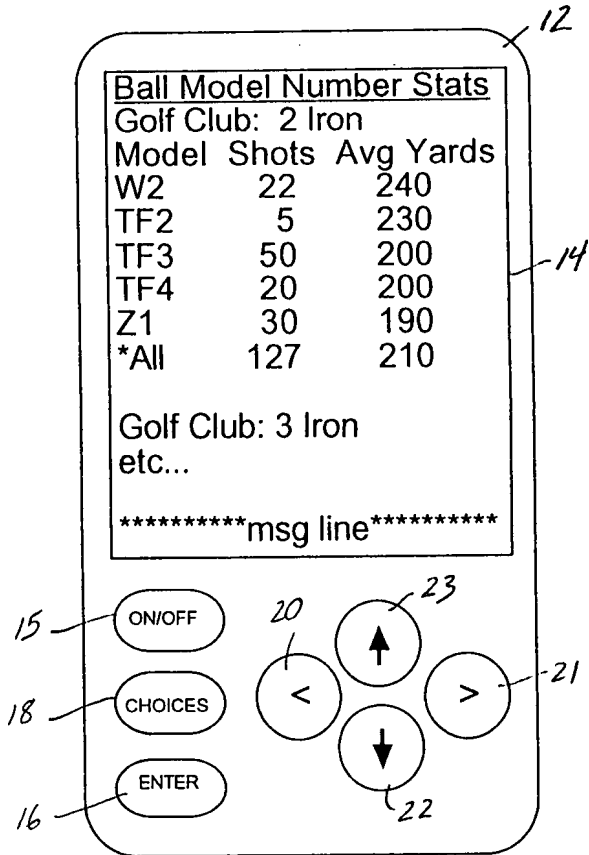


4/19/93

00 392280

Fig. 26

 TEMPERATURE REPORT

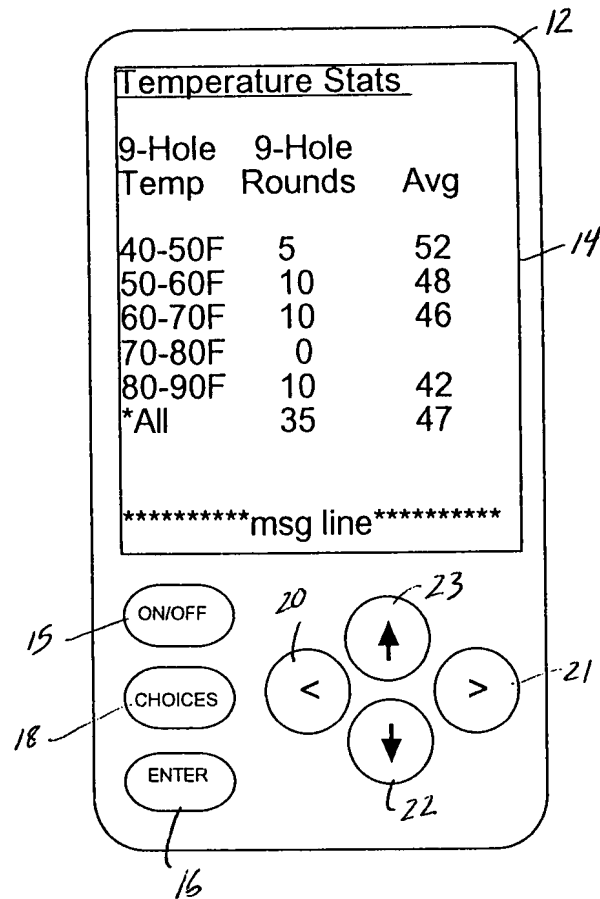

392280

Fig. 27

GROUND CONDITION REPORT

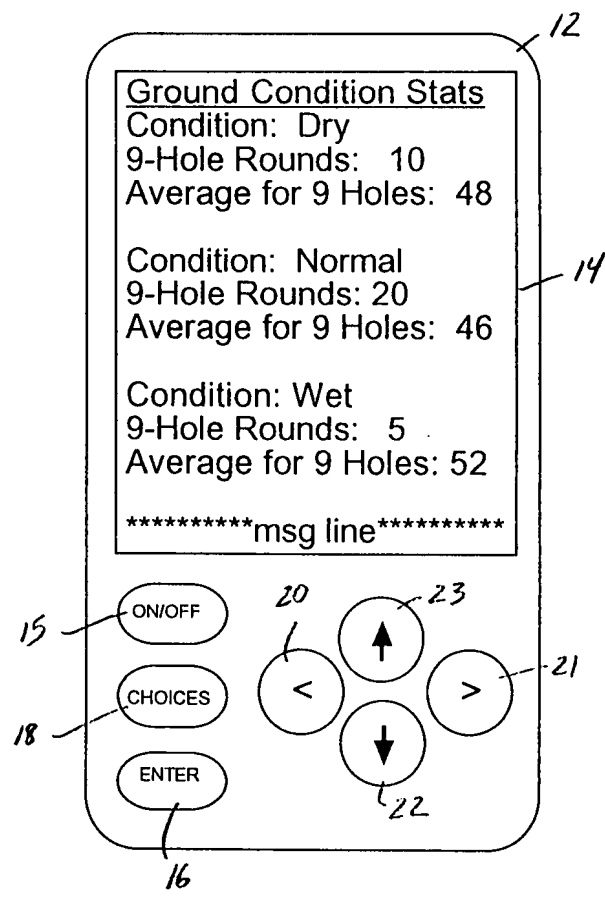 


Fig. 28

PHYSICAL ENDURANCE REPORT


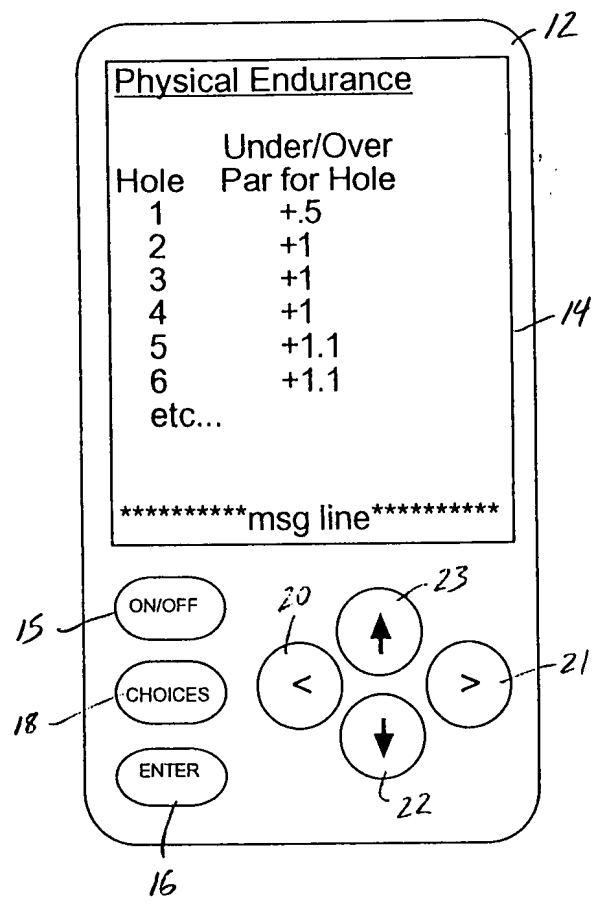 


Fig. 29

 
TIME-OF-DAY REPORT

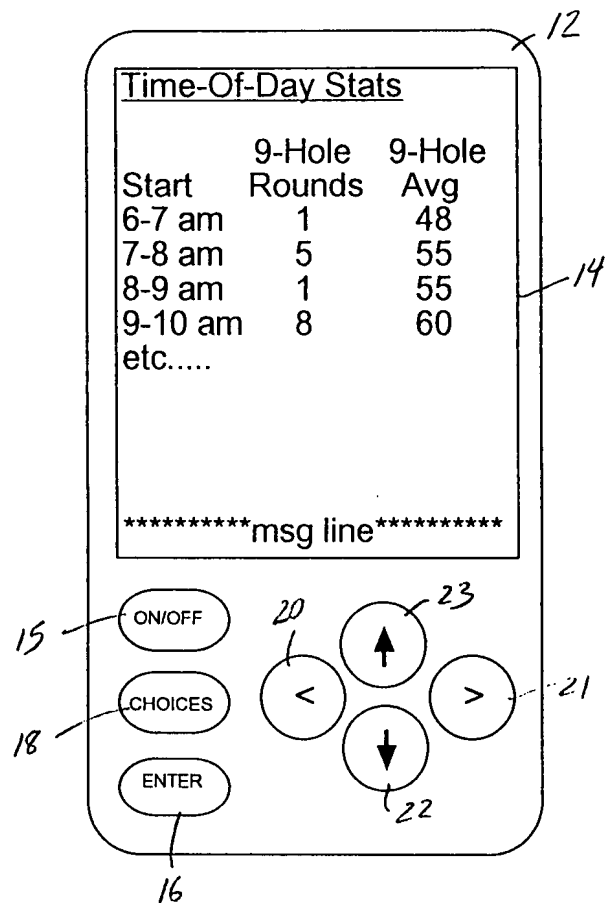

08 392 280

Fig. 30

 
OVERALL SCORE REPORT

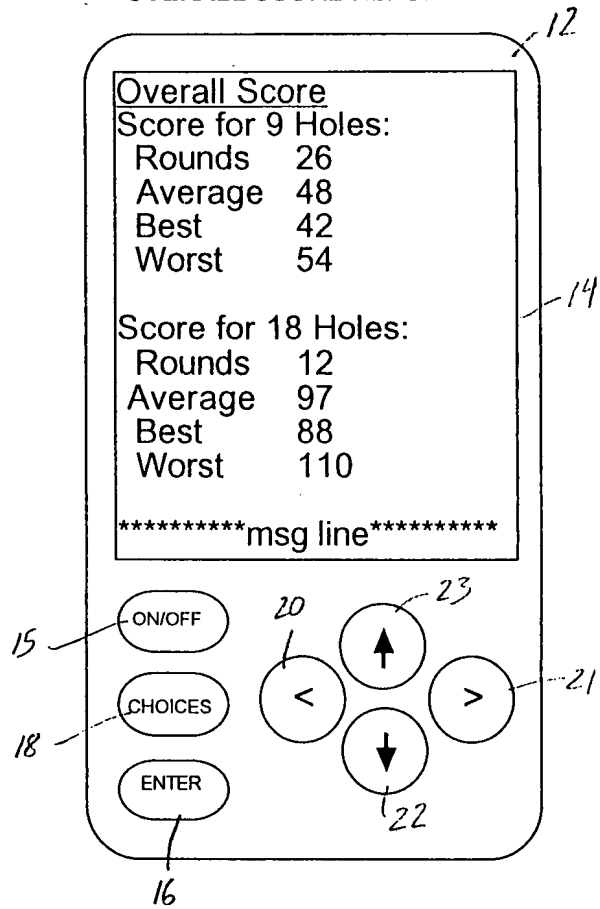

392 280
08 ~~058004~~

Fig. 31

 
COURSE SCORE REPORT

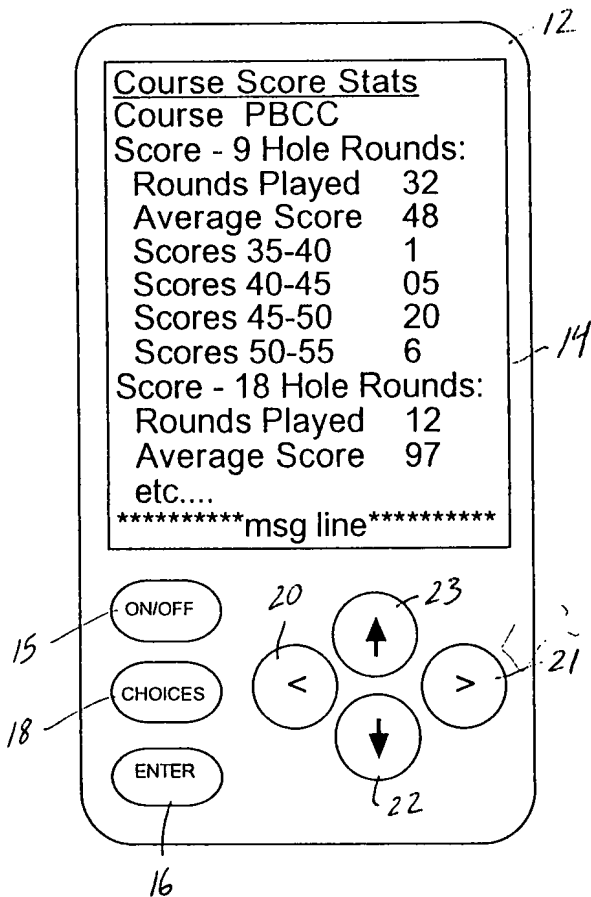

392280
~~058821~~

Fig. 32

 CLUB SET SUMMARY REPORT

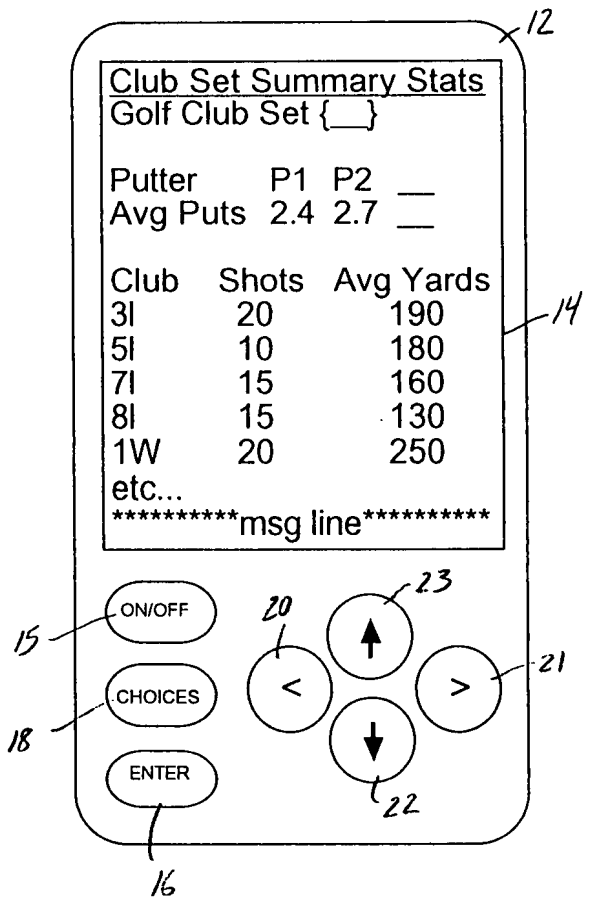

CLUBSET DETAIL
SPECIFY SCREEN

Fig. 33

392280
08 055074

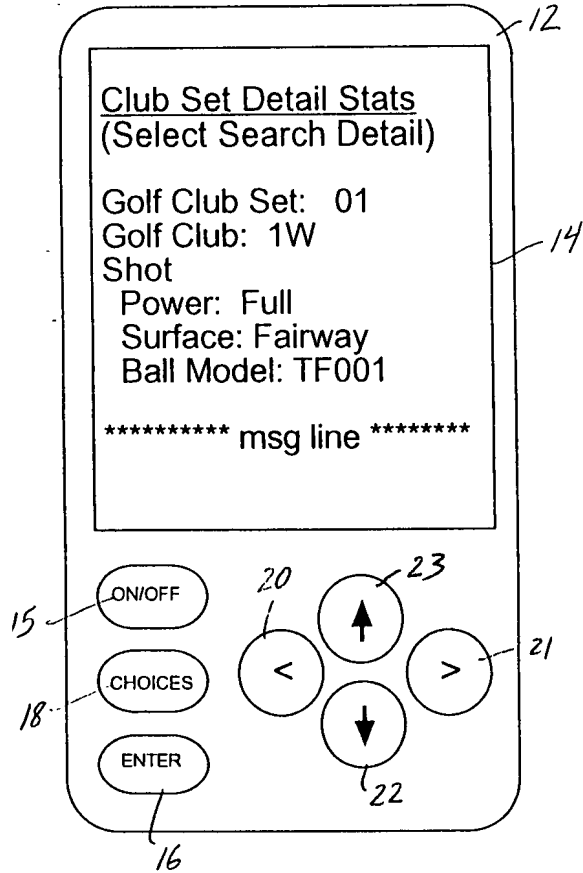 


Fig. 33a

CLUBSET DETAIL REPORT


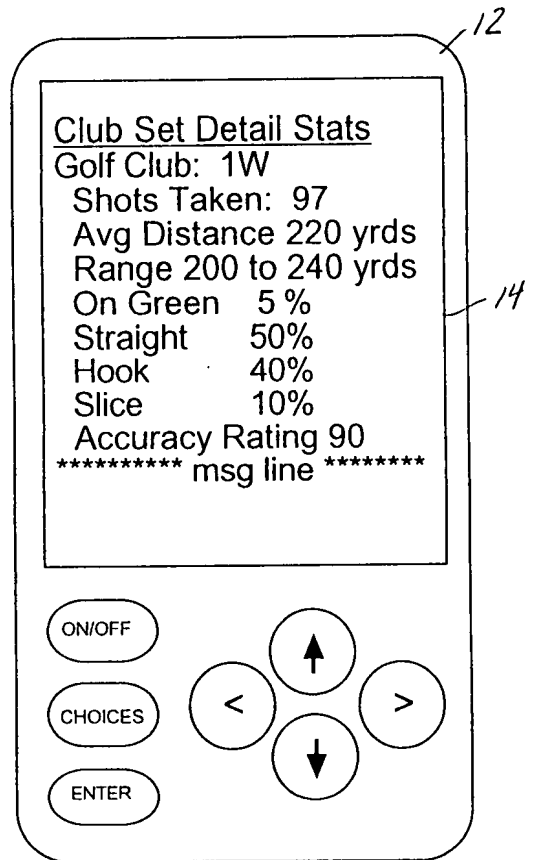 


Fig. 34

 
WHERE GAME BETTER REPORT

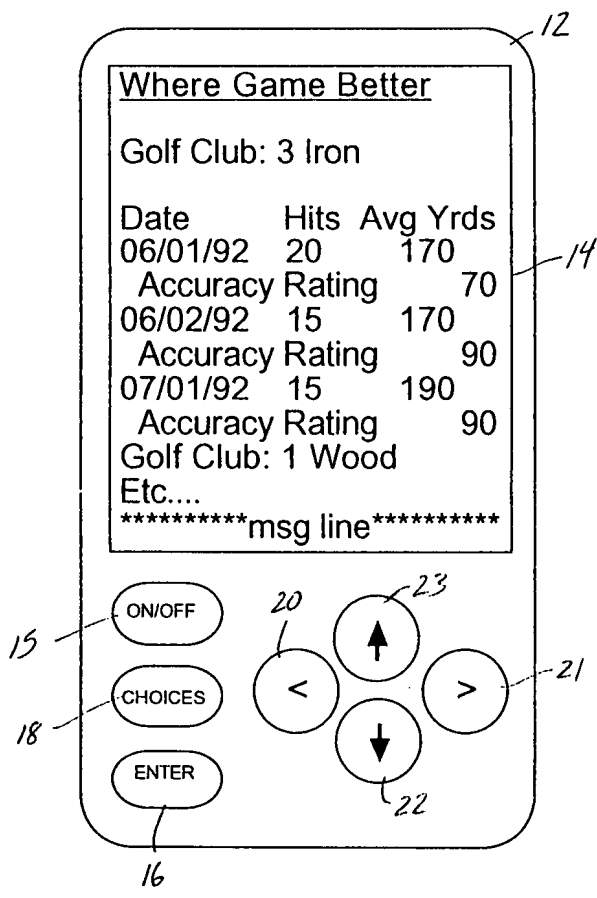

08 392280

Fig. 35

 
WHERE GAME WORSE REPORT

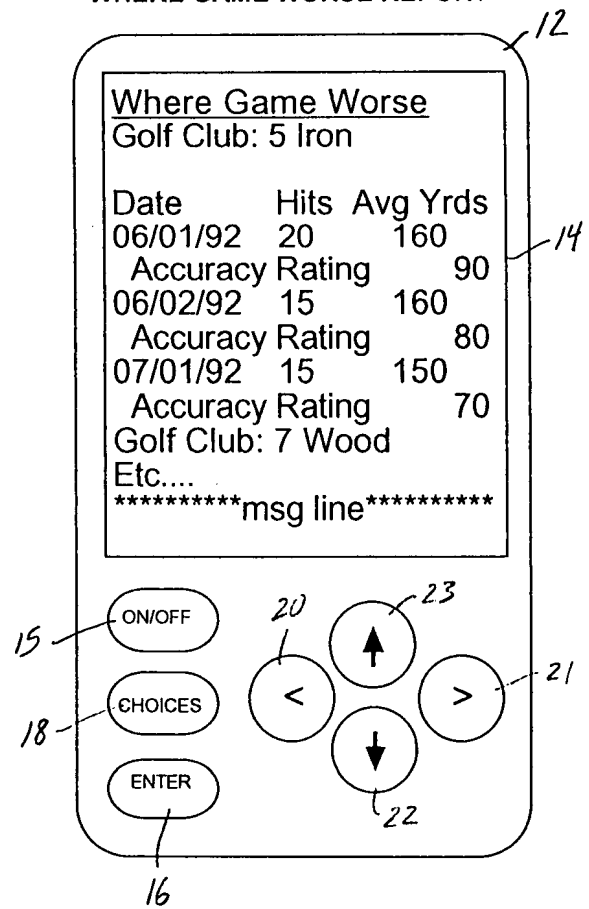

392280
08

Fig. 36

 
BEST PART OF GAME REPORT

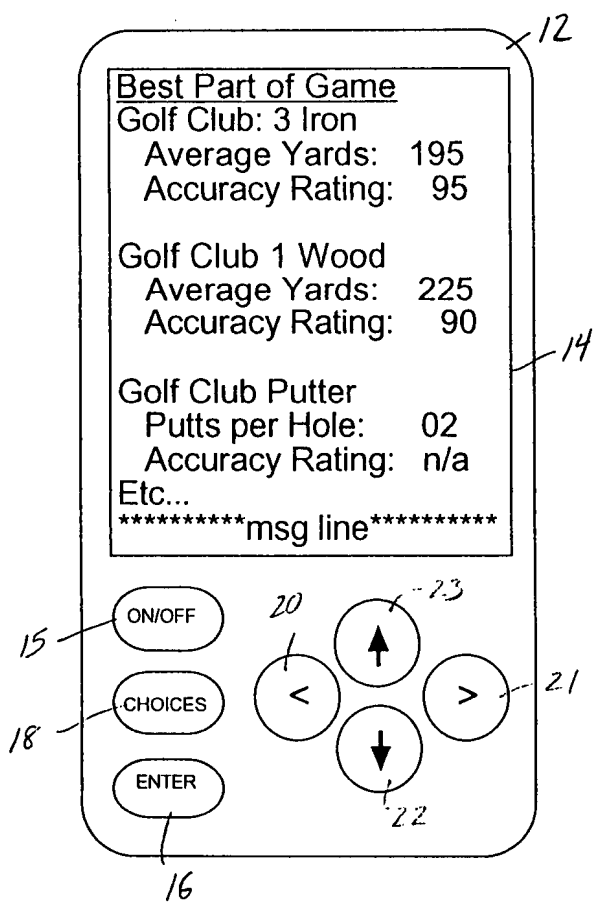

392280

Fig. 37

 WORST PART OF GAME REPORT

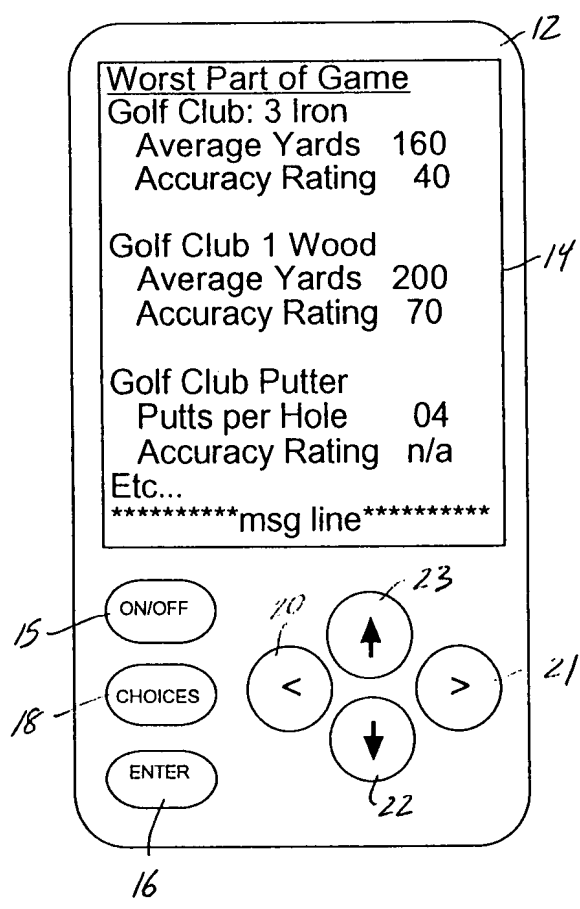


4/19/93

392280
00-000000

Fig. 38

 GAME DURATION REPORT

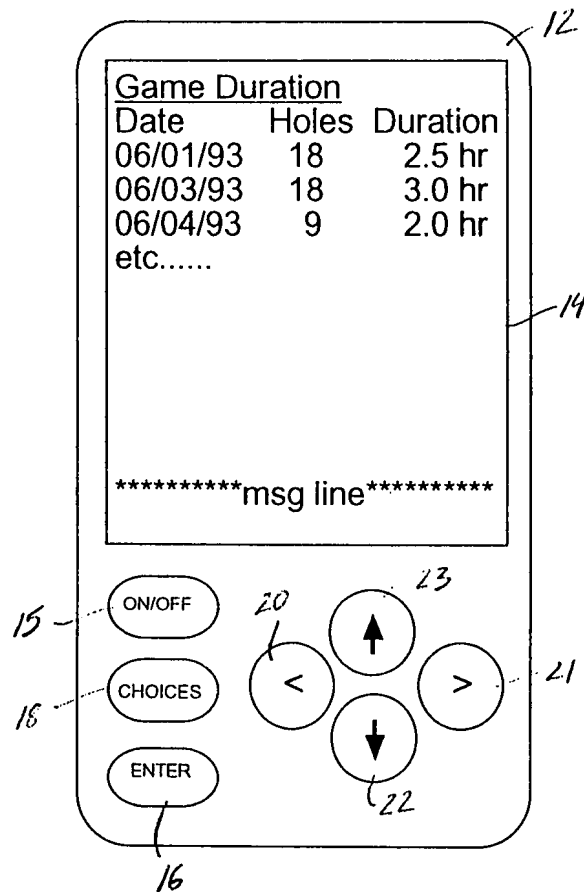


4/19/93

392280
00 058074

Fig. 39

 HOLES PLAYED REPORT

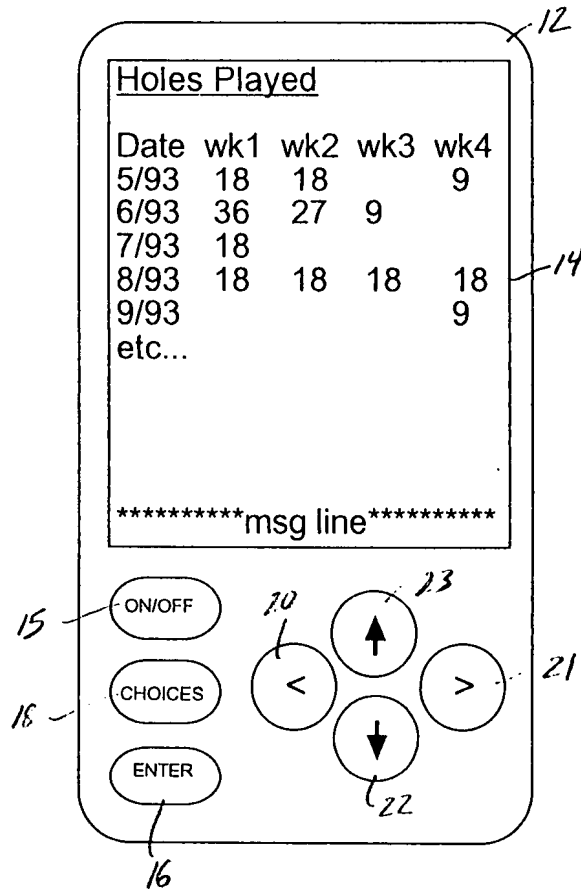

392280

Fig. 40

HAZARDS REPORT

